


OPERATING INSTRUCTIONS



1

CLEAN AND LUBRICATE INJURY

Squirt vulcanizing cement on probe. Push into injury several times, using a circular motion. Remove probe, clean, squirt again with vulcanizing cement. Lubricate injury once more. Leave probe in hole.

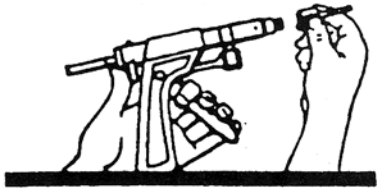

2

PREPARE TO LOAD GUN

Unscrew nozzle and cock gun by pressing button plunger release. Select the proper nozzle. Use small nozzle with the 3/8" plug. Use large nozzle with 7/16" plug.




3

LOAD PLUG IN GUN

Insert plug in gun chamber. Push plug head into chamber with tip of nozzle until plug disappears, this is important. ~~Then replace nozzle.~~

PLACE A FEW DROPS OF SILICONE LUBRICANT INSIDE NOZZLE, THEN REPLACE NOZZLE

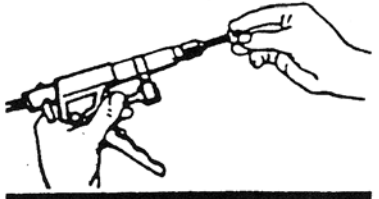

4

INSERT PLASTIC TIP


Place plastic tip in nozzle of gun and squirt thoroughly with vulcanizing cement.



5

LUBRICATE INJURY (SPOUT CAN)

Remove probe from tire. Lubricate injury generously with spout can. Do not push spout completely through tire. Keep end of spout in tread area.

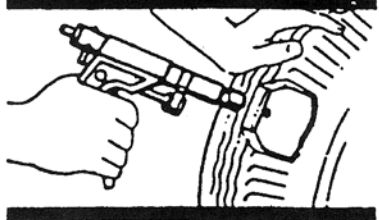

6

INJECT PLUG INTO TIRE

Work nozzle into injury as far as possible. Pull trigger until plug has been discharged from gun. (When plug has been discharged, trigger will automatically lock.) Press push button plunger release unlocking trigger mechanism. Withdraw nozzle from tire and grasp plug with fingers and pull outward to seat head against inside of tire. Let plug relax to natural size and then trim off excess stem about 1/8" above tire tread.

TIRE CUT AWAY TO SHOW HOW JIFFY-PLUG FLARES OUT INSIDE TIRE.